



COOKTOP PARTS

For Models: RF367LXSQ4,RF367LXSB4,RF367LXSS4,RF367LXSY4
(Designer White) (Black) (S.Steel) (Universal Silver)

30" ELECTRIC CERAN FREESTANDING RANGE SELF CLEAN OVEN

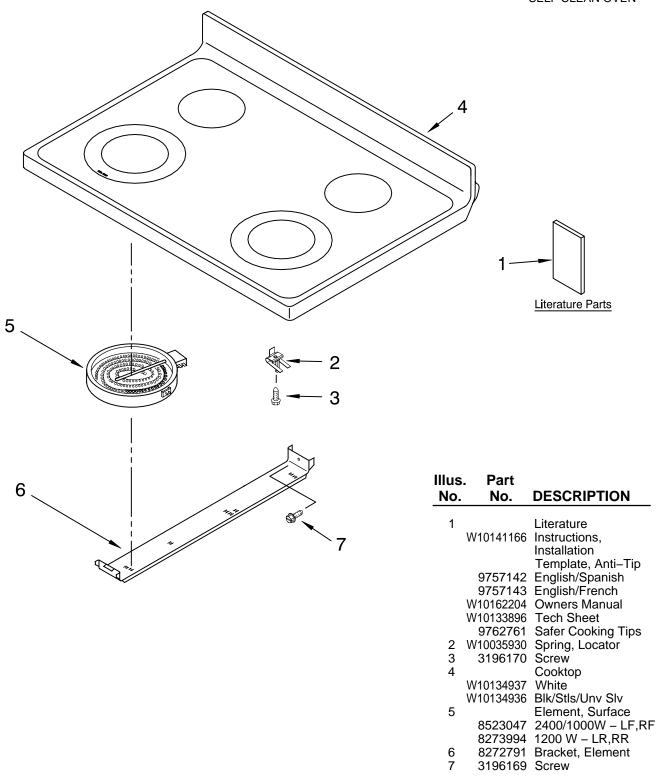


CONTROL PANEL PARTS
For Models: RF367LXSQ4,RF367LXSB4,RF367LXSS4,RF367LXSY4 (Designer White) (Black) (S.Steel) (Universal Silver)

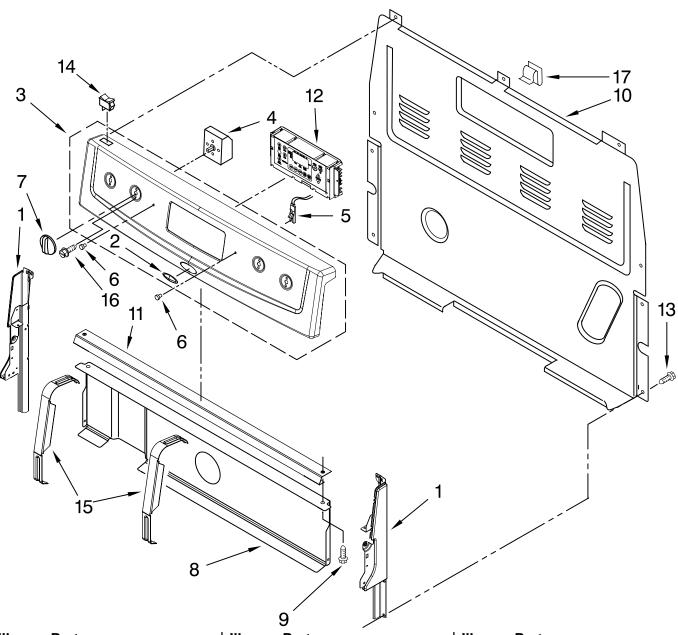

				9				
Illus No.		DESCRIPTION	Illus. No.	. Part No.	DESCRIPTION	Illus No.		DESCRIPTION
1		Endcap	4		Switch, Infinite	11	9762095	Brkt-Mntg, Console
	W10009080	Black Left		9758060	LF,RF	12		Control, Range
	W10009090	Black Right		3148951	LR,RR		W10108140	Black
	W10009040	White Left	5	8523265	Light, Ind. (2)		W10108130	White
	W10009050	White Right	6	3196068	Lens, Light (2)	13	3196178	Screw
2	9757609	Nameplate	7		Knob, Infinite (4)	14		Switch, Rocker
3		Panel, Control		9761964	Black		3149360	White
	W10118052	Black		9761962			3148564	Black
	W10117604	White	8	W10134247	Shield, Heat	15	9762078	Brkt-Mntg, EOC
	W10118053	Stnls./Unv.Slv.Mdl	9		Screw	16	3400882	Screw
				3196166	White	17	8273564	Clip
				3196168	Black			
			l 10	8272473	Cover Upper	1		

CHASSIS PARTS

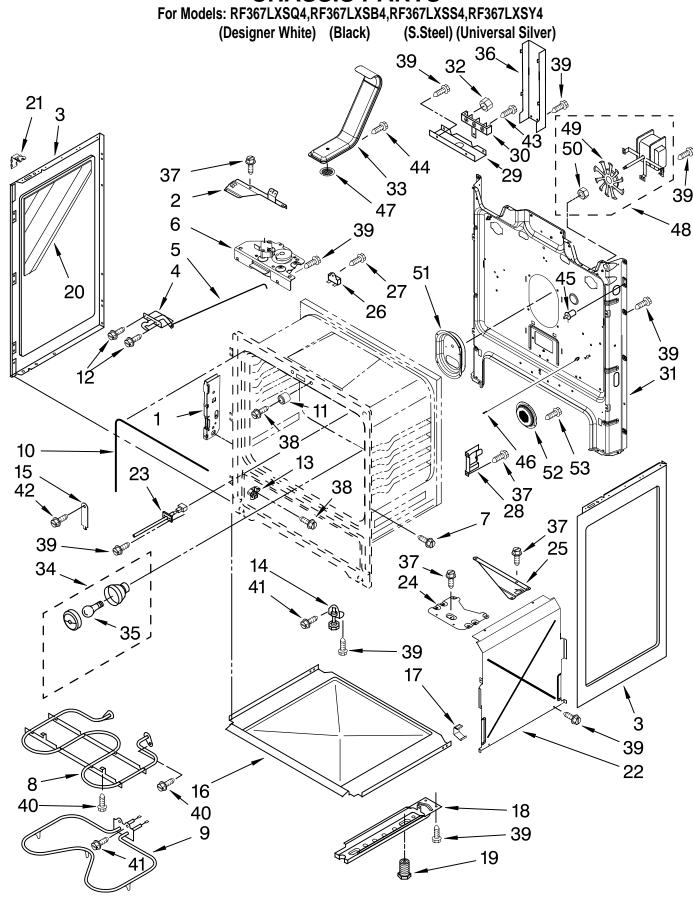


CHASSIS PARTS

For Models: RF367LXSQ4,RF367LXSB4,RF367LXSS4,RF367LXSY4
(Designer White) (Black) (S.Steel) (Universal Silver)

Illus. No.		DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
	1101	DECORAL HOR			<u> </u>			<u> </u>
1	9760407	Brkt-Mntg,Dr Hnge	21	9761512	Clip- Mounting	41	3196179	Screw
2		Support, Corner LR	22		Retainer, Side (2)	42	W10031780	Screw
3		Panel, Side (2)	23		Sensor, Oven	43	3400016	Screw
	8053830	White-Textured	24		Support, Front (2)	44	3196566	Screw
	8053832	Blk/Stnls/Unv Slv.	25		Support, Corner RR	45	9757238	Switch - Door
4	9761013	Latch, Door	26		Fuse, Thermal	46	9757239	Rod – Door Switch
5		Rod, Latch	27	3196172	Screw			Rear Mount
6	W10107830	Latch Asy, Rear	28	3186116	Support, Oven (2)	47	9761301	Screen – Catalyst
7	W10067840	Screw	29	3186034	Bracket, Service	48		Fan, Motor Cnyctn
8	9757340	Element, Broil	30	9761958	Block, Terminal	49	4452226	Blade, Fan
9	9758541	Element, Bake	31	9757029	Back, Main	50	4452227	Nut
10	8522416	Seal, Oven Door	32	112432	Nut (3)	51	9755776	Bracket, Fan
11	9758701	Spacer, Door	33	9761299	Vent Tube Asm	52	9755775	Cover, Fan
12	3196560	Screw	34	3196701	Light Socket Assy	53	4449809	Screw
13		Glide, Drawer (2)	35	311255	Bulb, Oven Light			
14	3196037	Foot, Front (2)	36	9758283	Cover, Box	INS	ULATION	
15		Clip,Door Mntg(2)	37	3196165	Screw			
16	8054068	Tray, Insulation	38	3196168	Screw			Insulation, Wrap
17		Clip, Panel (6)	39	3196178				Insulation, Back
18	9760314	Rail, Base (2)	40	3196174	Screw		8272613	Insulation, Vent
19	W10058460	Foot, Rear (2)						
20	9761490	Insulation						

DRAWER & BROILER PARTS

For Models: RF367LXSQ4,RF367LXSB4,RF367LXSS4,RF367LXSY4
(Designer White) (Black) (S.Steel) (Universal Silver)

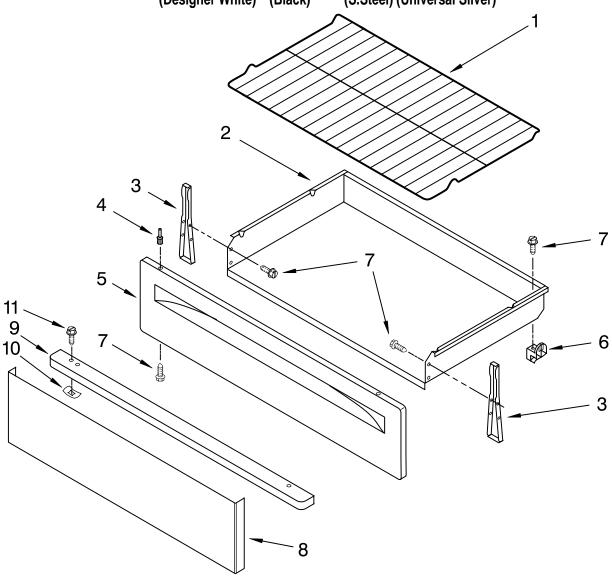

llus.	Part	
No.	No.	DESCRIPTION
1	W10138079	Rack, Oven (2)
2	9761031	Drawer, Storage
3	9758200	Bracket, Drawer(2)
4		Rivet, Push (2)
	3196814	White
	3196813	Black
5		Drawer Front
	8053339	White
	8053341	Black
6	8053334	Glide, Drawer (2)
7	3196168	Screw
8	W10133363	Panel,Stls/Unv Svl
9	.===0.10	Handle
	9757219	Stainless Steel
40	9762251	Unv. Silver Mdl.
10	9781235	Clip, Stls Model
11	W10031790	Screw(Stls.Model)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: RF367LXSQ4,RF367LXSB4,RF367LXSS4,RF367LXSY4 (Designer White) (Black) (S.Steel) (Universal Silver) 2 6 8 9 10 11 12 18 15 10 13 19 17 13 12 ¹⁶ 14 13 13 Illus. Illus. **Part Part Part** Illus. **DESCRIPTION** No. No. No. No. **DESCRIPTION** No. No. **DESCRIPTION** 8 8272618 Insulation, Door 3196160 Screw 1 Trim, Top 13 9762391 Black 9761357 Retainer, Insltn Trim. Bottom 9 14 9761975 White 10 Hinge, Door (2) 8523177 Black 9761493 White/Black Mdl. 9762394 Black Stainless 8523175 White W10067560 Universal Silver 9761496 Stnls/Unv Slv Mdl. 8523180 Black Stainless 11 Glass, Outer Door 2 3196164 Screw W10067550 Universal Silver Handle, Door W10075990 Black 15 W10031790 Screw W10075980 White 9761983 Black 16 3196794 Bracket, Window(2) W10154806 Black Stainless 9761982 White 3196165 Screw 17 9761985 Universal Silver 12 Trim, Side W10031780 Screw 9761344 Liner, Door 8523171 Black Left 19 W10113759 Strap, Door 8522414 Seal, Window 5 8523165 Black Right 6 9758162 Glass, Inner (2) 8523172 White Left 3186289 Frame, Glass 8523166 White Right W10113926 Gray Left W10113925 Gray Right

6

OPTIONAL PARTS

For Models: RF367LXSQ4,RF367LXSB4,RF367LXSS4,RF367LXSY4
(Designer White) (Black) (S.Steel) (Universal Silver)

Illus.PartIllus.PartIllus.No.No.DESCRIPTIONNo.DESCRIPTIONNo.

Parts Not Illustrated and Optional Parts (Not Included)

SPLICING WIRES--25FT.

LENGTH

242828 Wire, Black 12 Ga. 150° c 242821 Wire, Blue 14 Ga. 150°c 242822 Wire, Brown 14 Ga. 150°c 14 Ga. 200°c 242823 Wire, Green 14 Ga. 150°c 242824 Wire, Orange 14 Ga. 150°c 242825 Wire, Red 14 Ga. 150°c 242831 Wire, Red 14 Ga. 200°c 242827 Wire, Yellow 14 Ga. 150°c

REFINISHING MATERIAL

799832 Kit, Porcelain Repair (White) 242756 Touch–Up Self–Clean(1/2 Pt) 261582 Grease

INSULATION

261514 Insulation, Fiberglass (1–1/2" x 24" x 120") 240132 Insulation, Fiberglass (2–1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

72017 White 4392899 Biscuit 511873 White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930 White 4392901 Biscuit 285006 Superior Black 206922 Primer (White)

PAINT, BULK (1 qt.)

799344 White (Uncut) 4392900 Biscuit(Uncut) Illus. Part
No. No. DESCRIPTION

ACCESSORY PARTS

241430 Foil, Aluminum Oven (18" x 25') 3191048 Cleaner, Glass

ANTI-TIP KIT

W10017440 Anti-Tip Kit

WIRING HARNESS PARTS

W10111767 Harness, Wire (Cooktop Left)
W10111791 Harness, Wire (Cooktop Right)
W10084710 Harness, Wire (Sensor/Dr Switch)
W10111777 Harness, Wire (Main)
W10144763 Tie, Harness
8523279 Wire, Ground
313660 Clip, Ground Wire
3196173 Screw
3196154 Screw, Ground

W10176981 7